



How to repair T1000, Optimail and Optimail 30 Ribbons


1. Cut a label in half lengthwise.




2. Remove about 1/2" of backing paper on one end, exposing the adhesive surface.



3. Use a paper clip to press open the ribbon brake and insert the label until it sticks to the ribbon.

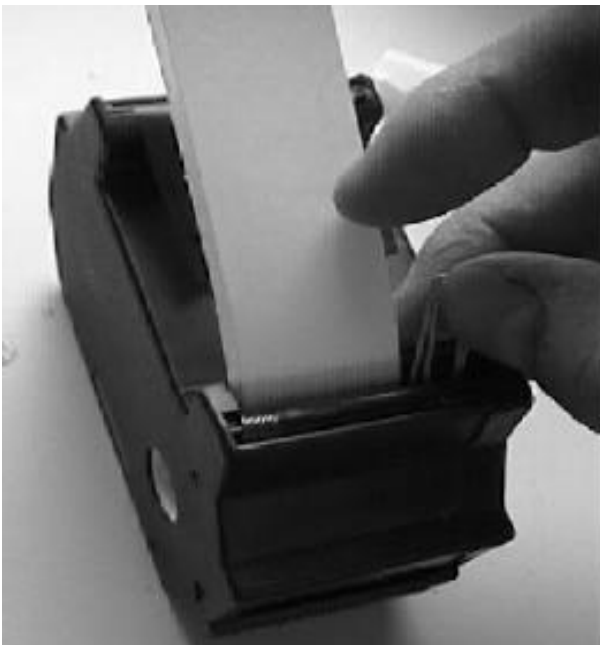

4. Cut the label so that about 2" is remaining outside the cartridge.

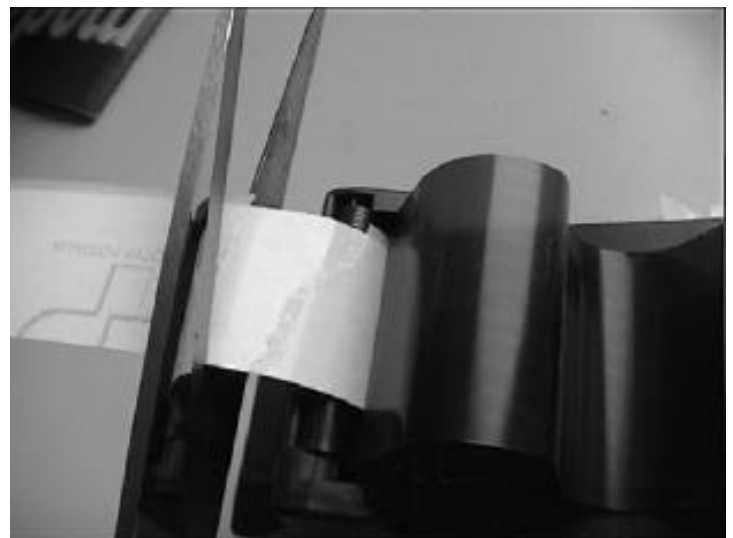

5. Peel off the rest of the backing and attach tape to exposed (other side) ribbon.



6. Tighten the ribbon using the winding roller until the repaired section of ribbon is fully inside the cartridge.



7. The repair should be finished.

